

## Loading a Backup in Stepper


Step 1. Double Click on the Stepper.exe icon.




Stepper.exe

Step 2. Confirm the Software is communicating. Logic, Bios and Controls. If the characters displayed are unreadable (pictured below), then one of three errors could be occurring.

- A. The COM cable from the PC to Stepper box is not attached and or damaged.
- B. The Stepper Box is not functioning and will need to be replaced or repaired.

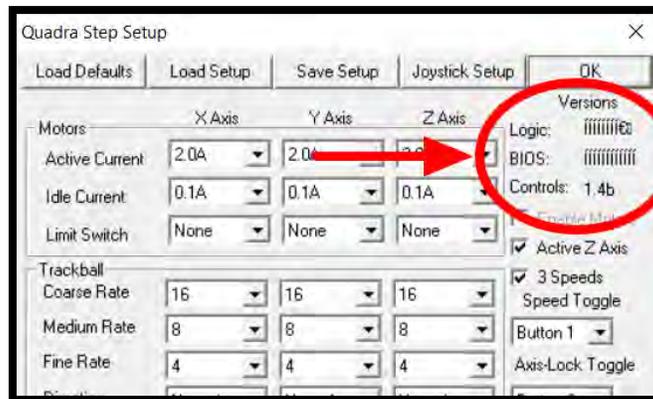

Step 3. Click on Load Setup

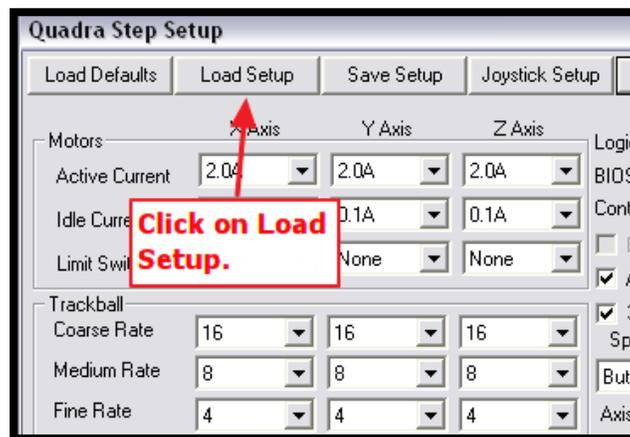

## Loading a Backup in Stepper

Step 4. Load the appropriate backup. (found on the system or provided by the manufacturer). Configuration file can be identified with a .cfg in the name.



Note: Load time may take a while depending on the computers processing speed.

Step 5.

