




1. Push the "Menu" button twice, then hit the soft key under the screen for "Edge".

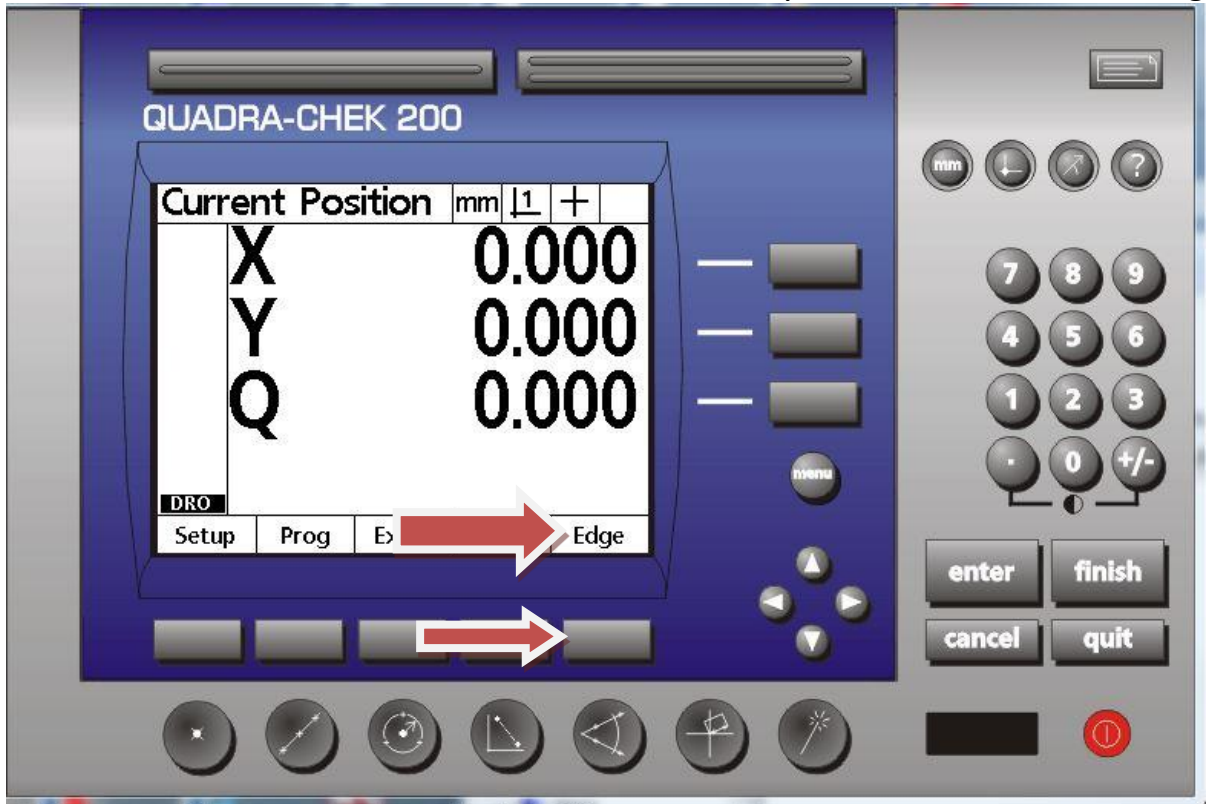


2. Press the "Install" soft key..

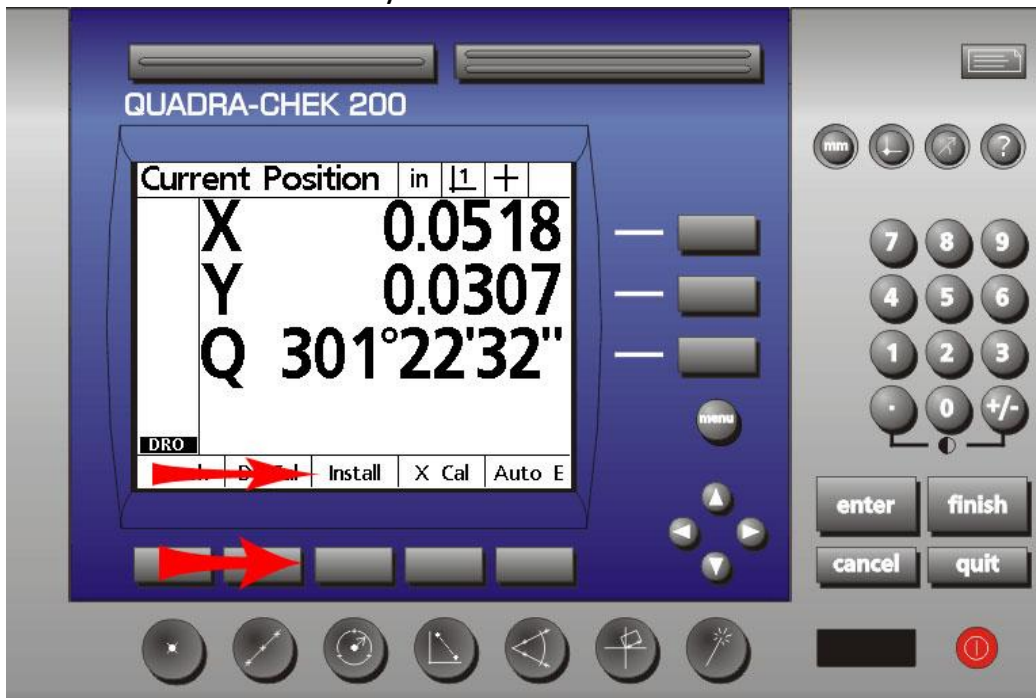

- 3.

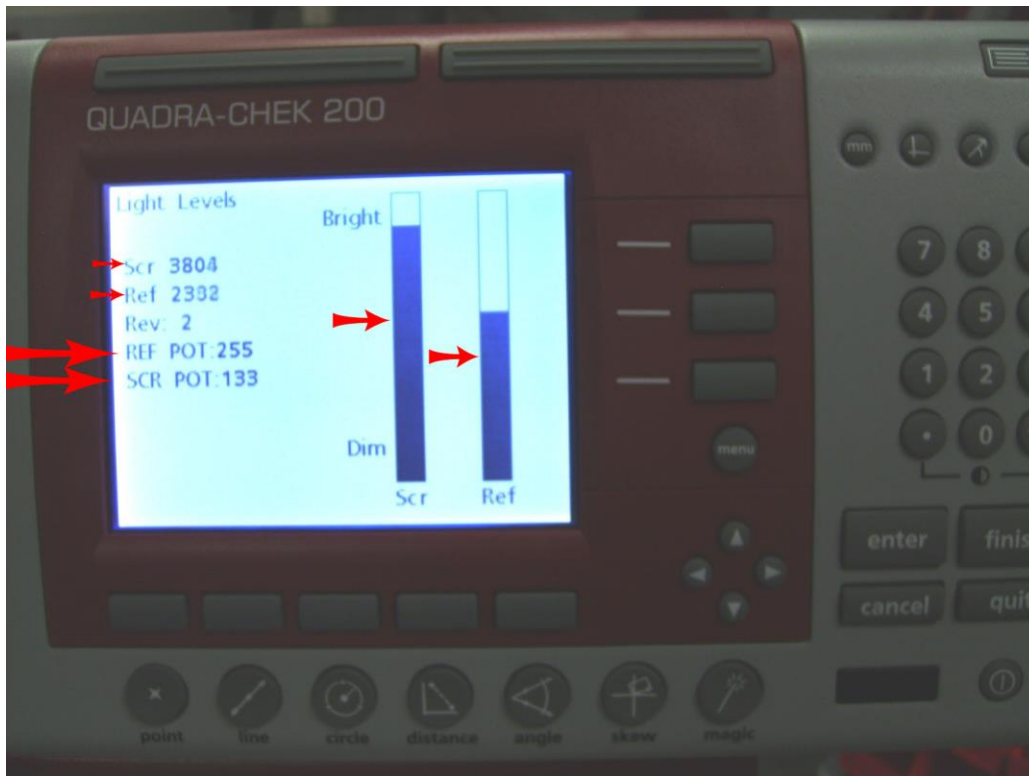

- 4.
5. Make sure the "Ref" reading is about $\frac{1}{2}$ to $\frac{2}{3}$ of the "Scr" level, and the "Ref" level is lower than the "Scr" level. If not, the cables are in the wrong spot. Check and see that the "Ref Pot" is 255, and the "Scr Pot" is 133. If not, make your adjustments in the lamphouse by the profile lamp to correct it. Make sure the F/O end does not touch the lamp heat shield. Hit "Finish" once.

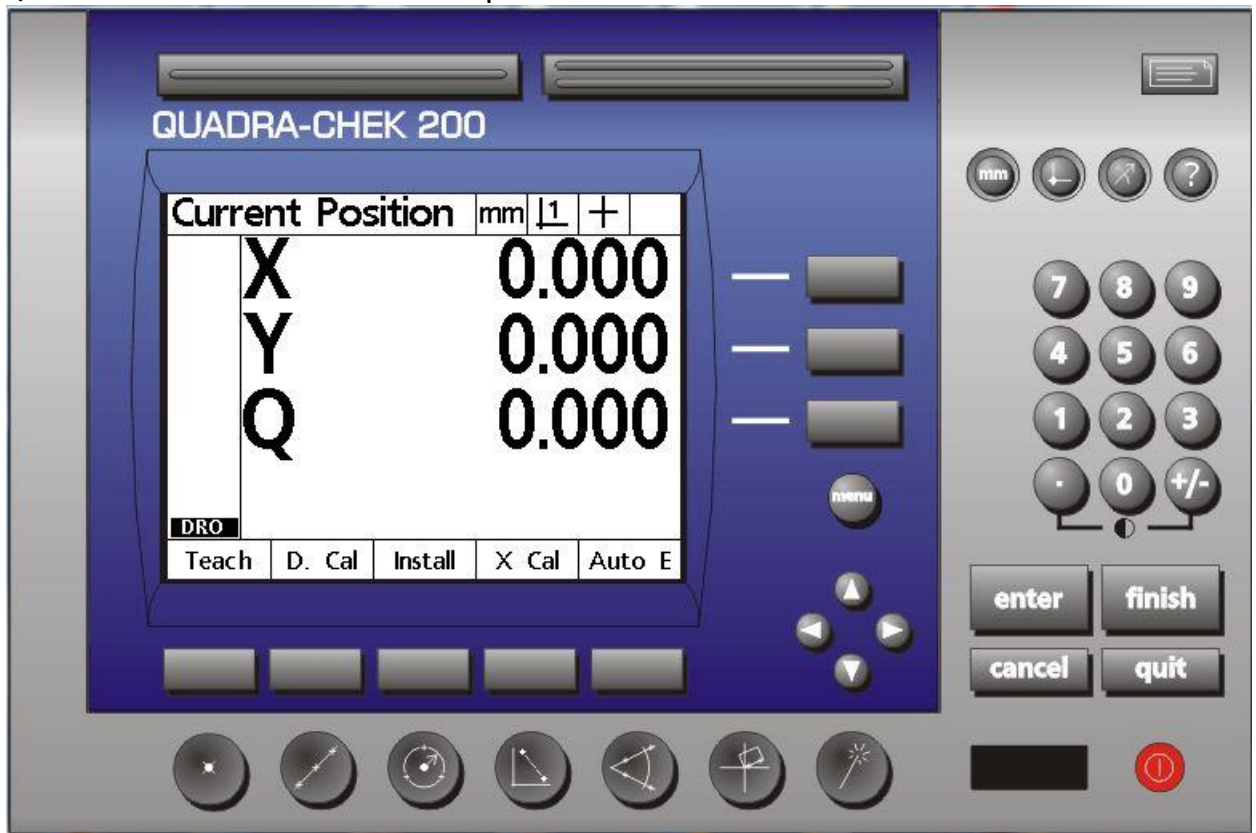

- 6.
7. Hit the "Teach" soft key, and go from light to dark and teach the DRO.